Application manual
Kebu-Repairstick

1

Remove non-stick parts, sharp edges of the factory wrapping. bevel with a rasp (semi-circular leaf).

2

Clean and roughen the surface with a hand wire brush.

3

Heat the factory wrapping.

4

Roughen the heated factory coating again with a hand wire brush.

5

Heat the Kebu Repairstick with a flame until the material softens. A slight inflammation of the repair pin is fine.

6

Heat the repair pen and repair area at the same time.

7

Smooth the material on the defect with a hot spatula.

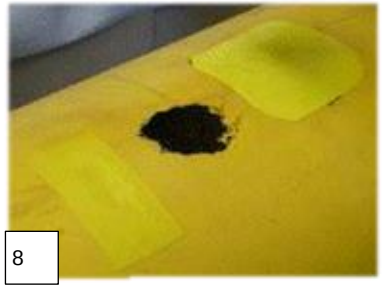

8

The heated mass of the repair pen must completely cover and fill the repair area. The final strength of the polyethylene pen is only reached after min. 2 hours.

Kebulin-Gesellschaft Kettler GmbH & Co. KG
Ostring 9 | D-45701 Herten-Westerholt
Tel. +49 209 9615-0 | Fax +49 209 9615-0 | info@kebu.de | www.kebu.de

Preserving **values.**

ORIGINAL kebu®